


Sun Roof Module (SRM), Calibrating

Sun Roof Module (SRM), Calibrating

NOTE: The illustrations in this service information are used for different model years and/or models. Some variation may occur. However, the essential information in the illustrations is always correct.

Calibration Calibrating the sun roof module (SRM)

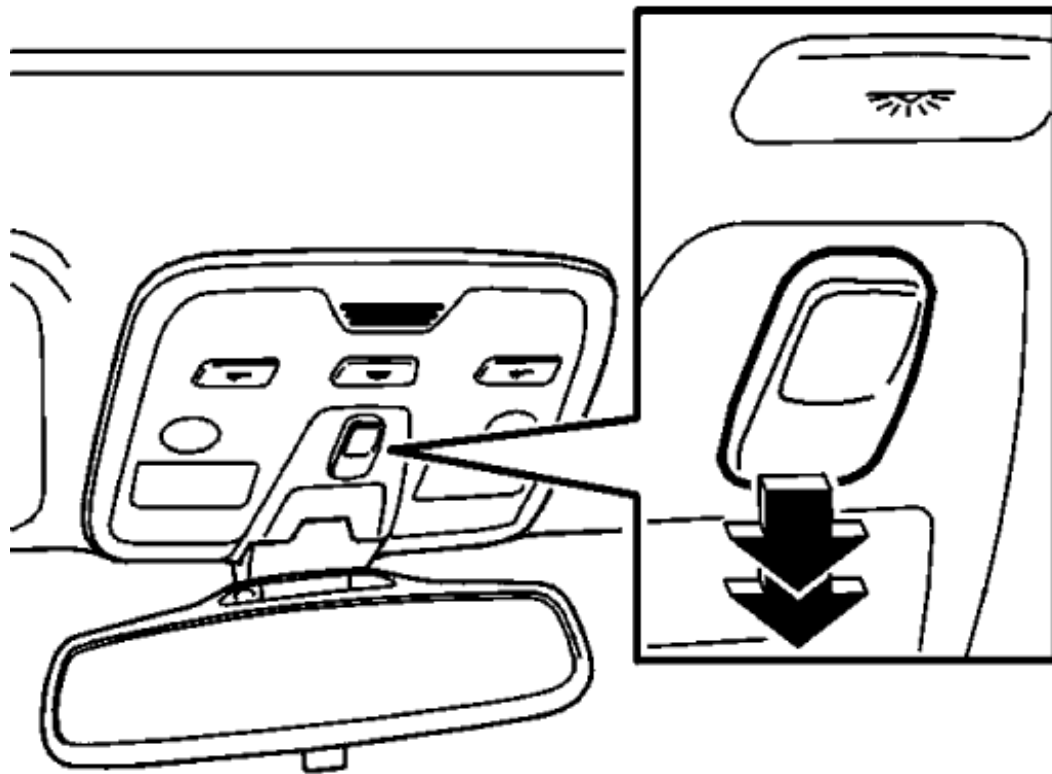

* The sun roof must be closed.

* Ignition in position I.

1. Press the sun roof switch so that the sun roof is in the tilt position. Release the switch.
2. Press the switch (in the tilt position) in again for at least 5 seconds so that the sun roof closes.

o Release the switch.

o The calibration is complete.

NOTE: If the sun roof has not moved to the correct position, carry out calibration again.

HINT: If the sun roof has still not moved to the correct position:

- * Press the sun roof switch so that the sun roof moves to the rearmost position (completely open).
- * Release the switch.
- * Press the switch (in the completely open position) in again for at least 5 seconds so that the sun roof closes.
- * Release the switch.
- * Close the sun roof and carry out calibration again.