


Service and Repair Bulb, Lighting, Dashboard Environment Panel, Replacing

Removal

Control bulbs

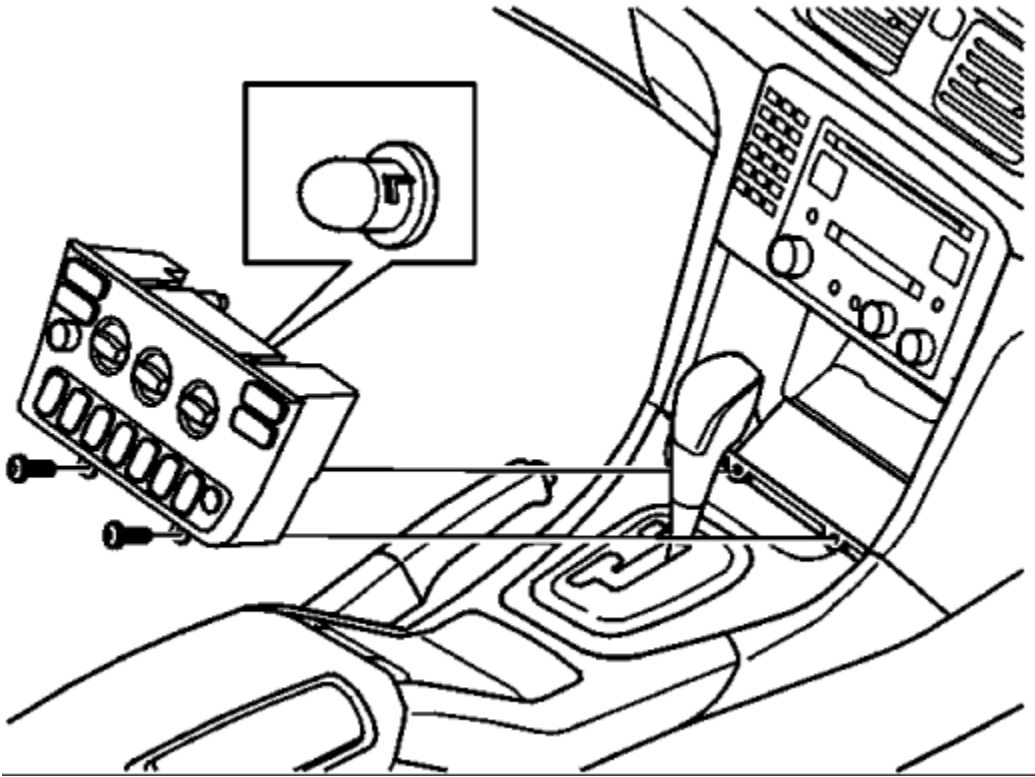

- Remove the dashboard environment panel.
- Remove the bulb and holder by turning the holder clockwise.

Bulbs in the switches on the lower row

The bulbs for the switches in the lower row on the dashboard environment panel cannot be replaced. The entire switch assembly must be replaced.

- Remove the switch.

Installation

Lower row switches In reverse order.

CAUTION: Carefully press the switch down when installing it. The terminal pins on the printed circuit board are fragile.

Control bulbs

In reverse order.