
2001 Volvo V70 XC AWD L5-2.4L Turbo VIN 58 B5244T3


Service and Repair Replacing Ignition Coils

Removing ignition coils

Remove

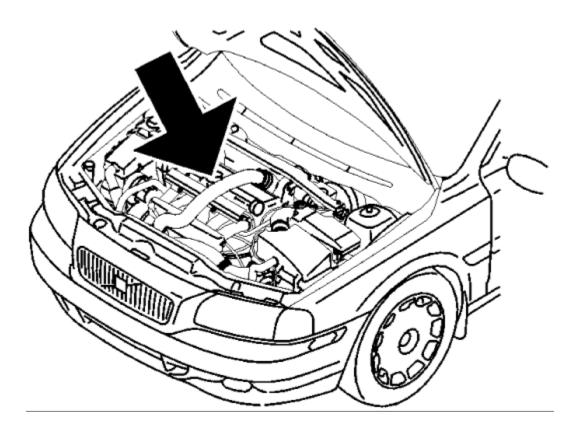

• the charge air pipe over the engine. Seal the openings

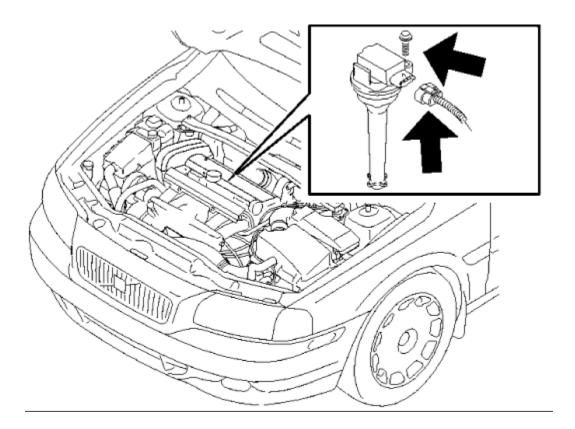

- the upper timing belt cover
- the cover over the ignition coils

Disconnect the ignition coil connector.


• the mounting screw. Pull the coil up.

Installing ignition coils

Install the new coil.

Align the coil and press it down. Install the screw. Tighten to $10\ Nm$.

Press in the connector until a clicking sound is heard.

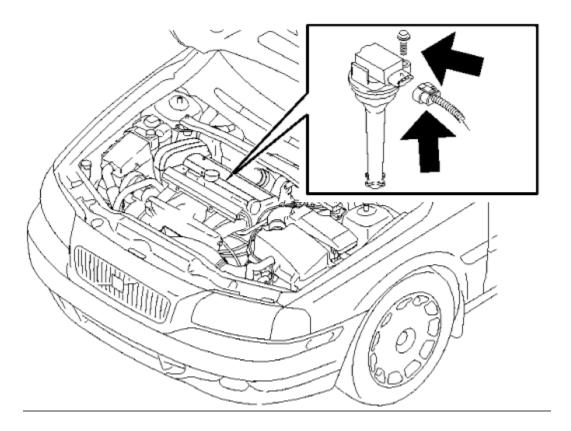

Install the cover over the ignition coil.

Install the upper timing belt cover.

Remove the seals from the charge air pipe. Reinstall the charge air pipe over the engine.