2001 Volvo V70 XC AWD L5-2.4L Turbo VIN 58 B5244T3


Replacing the Engine Torque Bracket

REPLACING THE ENGINE TORQUE BRACKET

Removing The Torque Bracket


NOTE: As the illustrations in this service information are used for different model years and/or models, some variation may occur. However, the essential information in the illustrations is always correct.

Remove

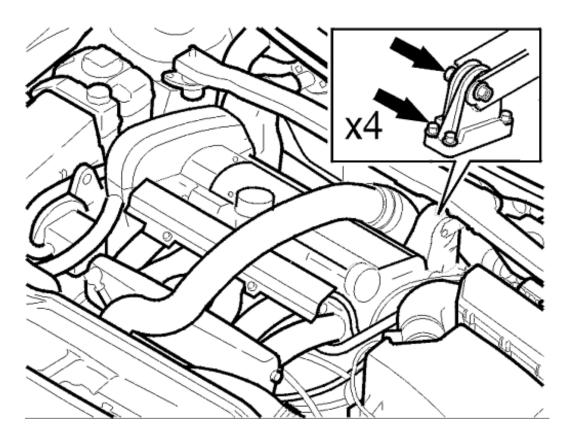

- * the engine stabilizer brace
- * the charge air pipe (only turbocharged (TC) engines)
- * the oil filler cap
- * the cover over the ignition coils the torque bracket.

Install

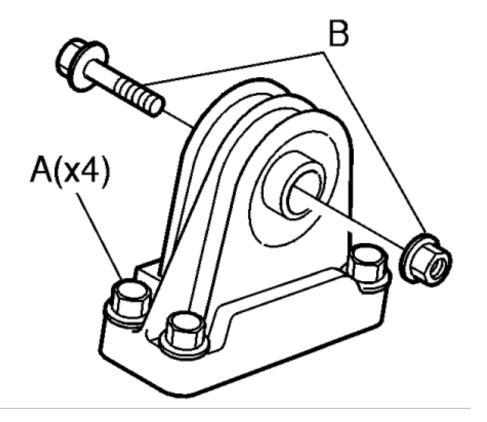

- * the torque bracket. Tighten the screws (A). Tighten to $50\ Nm$.
- * the screw for the dip stick pipe.
- * the cover over the ignition coils.
- * the oil filler cap.
- * the charge air pipe (only turbocharged (TC) engines)
- * the engine stabilizer brace.

Tighten the screws on the suspension turrets. Tighten to $50\ Nm$. Tighten the screw in the torque bracket (B). Tighten to $80\ Nm$.